



SALAMANDER SALAM-E600-PM-ECO



Description	Code
SALAM-E600-PM-ECO	V03198



INSTALLATION MANUAL



SALAMANDER SALAM-E600-PM-ECO



TABLE OF CONTENTS

1	INSTALLATION.....	3
1.1	GENERAL POINTS	3
1.2	HANDLING - INSTALLATION	3
1.3	INSTALLATION	3
1.4	DATA PLATE.....	3
2	POWER CONNECTION	3
2.1	CHECKS BEFORE PROCEEDING	4
2.2	CONNECTION TO POWER	4
2.3	CHECKS AFTER CONNECTION	4
3	START UP	4
4	MAINTENANCE.....	4
4.1	WIRING DIAGRAM.....	4
4.2	BASIC SPARE PARTS	5



SALAMANDER

SALAM-E600-PM-ECO



1 INSTALLATION

1.1 General points

The appliance must be installed in a room with adequate ventilation, in compliance with the regulations and standards in force in the country of installation, and with the instructions contained in this manual. Special attention must be paid to the local fire prevention regulations of the organization concerned (see [Public Access Permisses]).

Please train every user in the operation of the equipment after installation.

The user's manual must be given to the user after installation.

Any intervention or repair on an appliance must be undertaken by a qualified installer.

WARRANTY: The warranty is discussed in our sale contract. This warranty does not cover damage due to faulty installation, misuse or inadequate maintenance.

1.2 Handling - installation

It is imperative to leave the appliance on its pallet during the handling process until the final installation. Unpack and check the appliance for damage upon receipt.

In case of damage, detail them immediately on the delivery note; notify the carrier by registered mail with acknowledgement of receipt within 48 hours.

1.3 Installation

The appliance must be installed under a suitable ventilation hood.

If the apparatus is to be installed against a wall or partition, near a piece of furniture or decorative borders, it is recommended that these are made of fireproof material. If this is not the case, they must be protected by an appropriate fireproof, insulating material. If in doubt of the fireproof construction of adjacent walls, the distance to combustible material should be no less than 10 cm.

Remove all plastic protection and install the appliance in its work place in the cooking zone.

1.4 Data plate

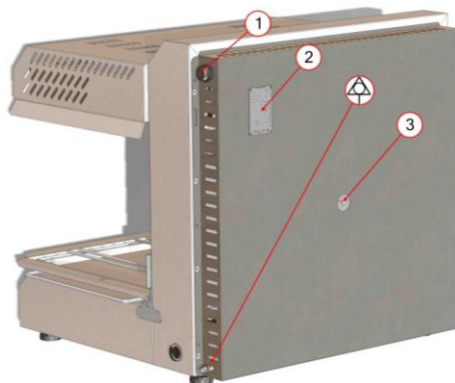 


Figure A

Each appliance has its own data plate (**Figure A Mark 2**)

2 POWER CONNECTION



The appliance must be earth wired.

It is dangerous to connect the appliance unless it is earthed.

Use a standardized cable (245 IEC 57 or 245 IEC 66) or other approved cable with the same characteristics.

Check that the electric network is equipped with all-pole circuit breakers having a cross section in compliance with the European Standard



Mobile appliances are equipped with an electrical plug of the correct wattage; the socket should be appropriate and accessible at all times.



SALAMANDER

SALAM-E600-PM-ECO



2.1 Checks before proceeding

Before connecting the appliance, check that:

- The electrical voltage of the supply is compatible with the voltage of the appliance (see data plate)
- The cable is fixed properly
- The connections are tight enough
- The gauge of the cable is compatible with the voltage of the appliance.

2.2 Connection to power

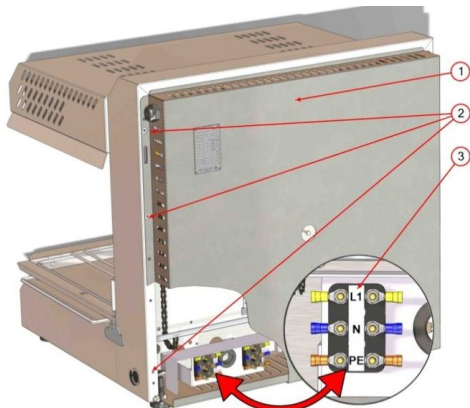 


Figure B

Loosen the screws (Figure B Mark 2) and remove the back of the appliance (Figure B Mark 1).

Connect the cable to the terminal block (Figure B Mark 3) according to the label on the terminal block.

2.3 Checks after connection

After connection, ensure that:

- The appliance is earth wired (see the warnings)
- The electrical equipment is well insulated
- The good working conditions of the appliance and of its safety controls.

3 START UP

Please see the user's manual, section 'Start up'

 
4 MAINTENANCE

4.1 Wiring diagram







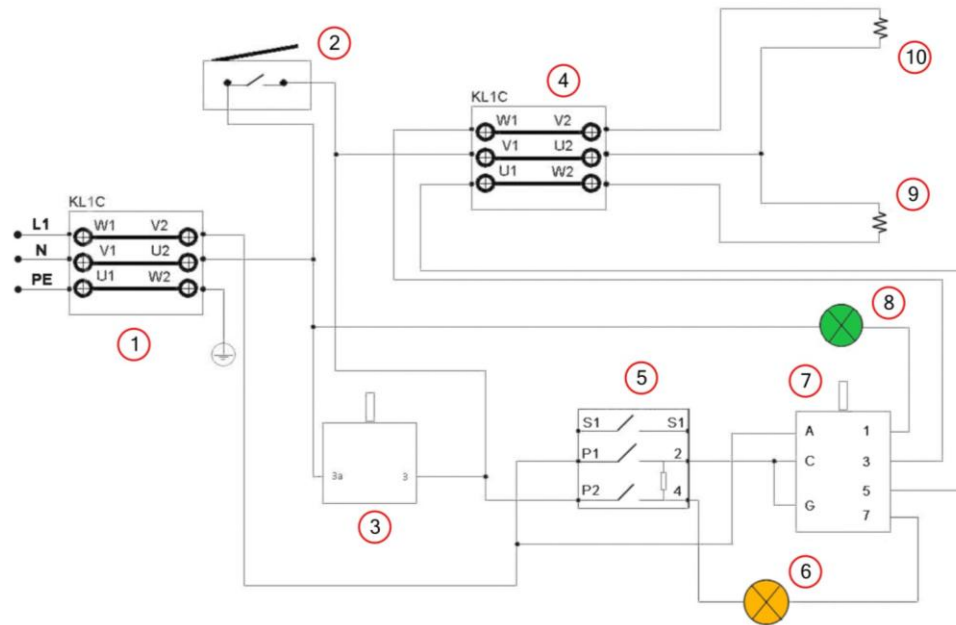 




Mark	Code	Description	Mark	Code	Description
01	506744	Terminal block	05	09099A	Simmerstat 230V
02	506747	Micro-switch (plate detector)	06	173640	Orange indicator light
03	506745	ON/OFF switch	07	506746	Heating zone selection switch
04	506744	Terminal block	08	173642	Green indicator light 230V
			09/10	506749	Heating element



SALAMANDER SALAM-E600-PM-ECO

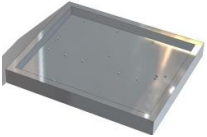

4.2 Basic spare parts

Code	Description	Code	Description	Code	Description
506746		506745		506658	
Heating zone selection switch		ON/OFF Switch		Electric knob	
506744		506747		173640	
Terminal block		Micro-switch plate detector		Orange indicator light 230V	
506749		506748		173642	
Heating element		Chain		Green indicator light 230V	
09099A				506609	
Simmerstat 230V				Lexan	



SALAMANDER SALAM-E600-PM-ECO



Description	Code
SALAM-E600-PM-ECO	V03198



USER'S MANUAL



SALAMANDER SALAM-E600-PM-ECO



TABLE OF CONTENTS

1	INTRODUCTION.....	8
2	CONTROL PANEL	8
3	PRIOR TO STARTING UP	8
4	START UP	8
4.1	SAFETY INSTRUCTION.....	8
4.2	USE.....	9
5	SWITCHING OFF	9
6	MAINTENANCE.....	9
6.1	CLEANING	9
7	BASIC SPARE PARTS	10



SALAMANDER

SALAM-E600-PM-ECO



1 INTRODUCTION



Our equipment is for professional use only and must be used by qualified staff.

It is imperative to hire a qualified installer for all new installations or modifications of existing equipment.

The warranty is discussed in our sale contract. Only an authorized reseller certifies the validity of the warranty. This warranty does not cover damage due to faulty installation, misuse or inadequate maintenance.

2 CONTROL PANEL

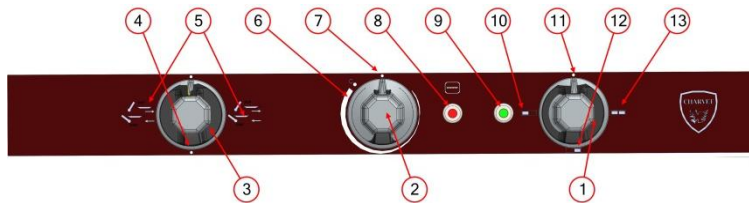 


Figure C

Mark	Description	
1	Heating zone selection knob	8 Orange indicator (ON when heating)
2	Power adjustment knob	9 Green indicator (ON when Switched on)
3	Eco-mode selection	10 Left heating zone ON
4	Plate detector OFF	11 OFF position
5	Plate detector ON	12 Right heating zone ON
6	Power rate indicator	13 Both heating zones ON
7	OFF position	

3 PRIOR TO STARTING UP

- Prior to starting up, it is advisable to clean the appliance in order to eliminate all dust and impurities that have accumulated during storage.
- Remove all plastic protection wrapping from the stainless steel panels.
- Make sure that all controls are in good working condition.

4 START UP

4.1 Safety instruction



Please respect these instructions scrupulously to avoid any risk of fire, electric shock, scald or other wounds and damage. During the use of this appliance, fundamental circumspection of security must always be noticed, such as:

- Take into account the instructions to be systematically kept with the appliance.
- Install the appliance always in instructions respect. A 40 cm distance minimum with the partition or the wall is necessary.
- Protect the appliance from direct light of the sun, frost and humidity.
- Never leave the appliance within the reach of children or disabled persons without surveillance.
- Never move the appliance when it is working or when the cooking surfaces are still hot.
- Check that the appliance is definitely off before connecting it up or disconnecting it.



SALAMANDER

SALAM-E600-PM-ECO



- Do not touch the hot surfaces of the appliance. The temperature of the hot surfaces can be very important when the appliance is working. Always use handles and control knobs.
- Do not use the appliance for other functions than determined use.
- Do not leave the cord of electrical feeding in the contact of hot surfaces.
- The appliance should not be used close to combustible materials.
- During use, look after not to obstruct hearings of aeration of the appliance
- To avoid any electric shock, never plunge the appliance, the cord or plug in water or quite other liquid.
- If the cord is harmed, it must be replaced by the producer, his after sale service or persons of similar skills to avoid any risk.
- Entrust compensations only to a skilled person.
- Use only spare parts of origin.
- At the end of cooking, before cleaning the appliance, do not forget to disconnect it.

4.2 Use

- Select the heating zone using the knob (Figure C Mark 1) and the working mode knob (Figure C Mark 3)
- Select the power level knob (Figure C Mark 2)

5 SWITCHING OFF

- Turn all controls to the 'OFF' position.
- Drain the tank.
- At the end of the day, switch off electricity at the mains.

6 MAINTENANCE



For best results, have your equipment serviced and cleaned on a regular basis by a qualified installer.

Contact the supplier to replace any faulty electric control components before further use. The manufacturer and the installer cannot be held responsible if the user fails to ask for assistance in case of malfunction.



Beware! Some parts of this appliance are factory sealed; in case of malfunction, call a registered installer.

6.1 Cleaning



This appliance must not be cleaned with mechanical water jets or be subjected to a spray of water under pressure. Check that the appliance is disconnected at the main power supply.

Before doing anything on the appliance, wait until cooking areas have cooled down.



Never clean the ceramic glass when it is hot

- Switch off the appliance. After each service and before each cleaning operation, we advise you to disconnect the appliance from the mains (gas and electric supplies).









 




SALAMANDER

SALAM-E600-PM-ECO

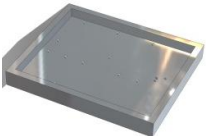

- Wash with a sponge and soapy water (or any other neutral cleaning product).
- Do not use bleach or any other acidic product-even well diluted.

7 Basic spare parts

Code	Description	Code	Description	Code	Description
506746		506745		506658	
Heating zone selection switch		ON/OFF Swicth		Electric knob	
506744		506747		173640	
Terminal block		Micro-switch plate detector		Orange indicator light 230V	
506749		506748		173642	
Heating element		Chain		Green indicator light 230V	
09099A				506609	
Simmerstat 230V				Lexan	